Guide

eNotice electrical logbook for mine sites

Contents

eNotice electrical logbook	2
Logbook Entity setup options	2
Request logbook access	3
Administrator login	4
Administration user management	4
Create a logbook	5
Add and edit IH/EC licence's	5
Add an electrical worker with authority	6
New logbook entries	7
Electrical installing work entry	8
Electrical supervisor entries	9
Viewing entries and editing logbooks	9
Review and acknowledge Logbook entries	
Download logbook history	11
Available logbook user access	


eNotice electrical logbook

eNotice electrical logbook supports compliance with the Electricity (Licensing) Regulations 1991 (E(L)R 1991), and the Work Health and Safety (Mines) Regulations 2022 (WHS(M)R 2022), by allowing owner controlled online recording of incidents, electrical installing work and inspection/test records at mine sites into the electrical logbook.

Logbook Entity setup options


Before applying for an eNotice electrical logbook, consider how to structure your eLogbook. The diagrams below illustrate your options.

- Option 1. One eNotice electrical logbook Entity appliaction
- Option 2. Unrestricted eNotice electrical logbbook Entity applictions

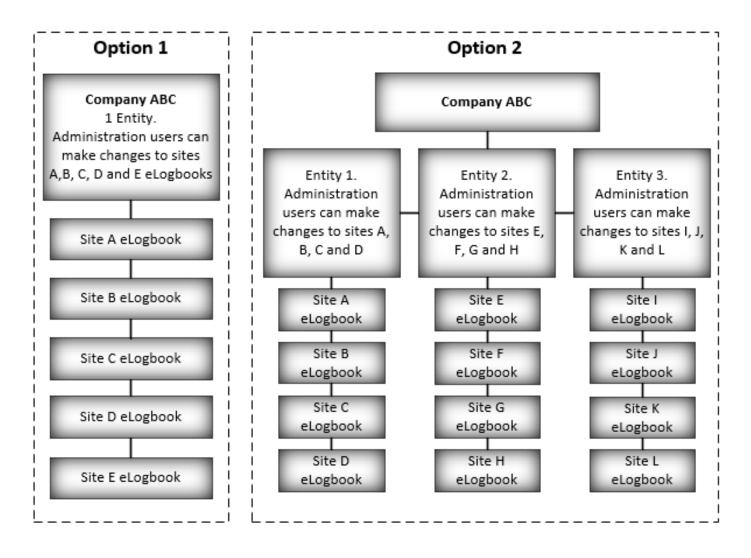


Request logbook access

An application can be made by visiting the <u>Using electrical eNotice</u> webpage. Under the heading Electrical Logbook for mine sites, select Request logbook access. You will be then asked to provide online details.

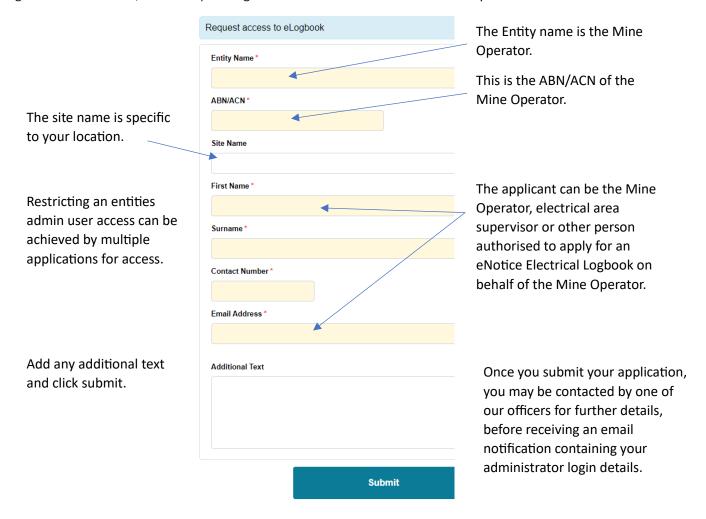

Administrator login

Using the login ID and password received in you registration email, access the eNotice Login webpage and login.

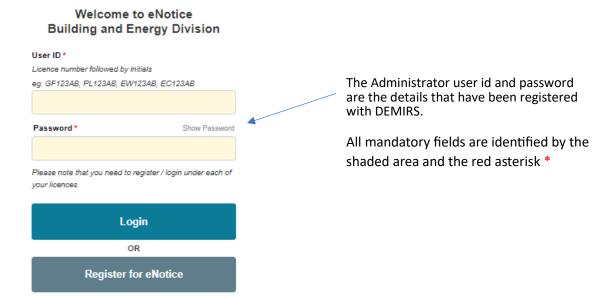

Once logged in, you will be directed to a main menu. Located in the menu is an option to "Change Password". It is strongly recommended that you change your password to a more secure and personalised one to ensure your account is protected from unauthorised access.

Administration user management

There are 3 levels of administration user access:

- User Management Allows administrative changes to be made.
- View Logbooks Allows view only access.
- Review Logbooks Allows viewing and the ability to acknowledge/comment on entries.

Restricting logbook administration access can be achieved by one logbook application.


Restricting many administration users access to your logbooks can be achieved by multiple 'Request access to eLogbook' applications.



From the Main Menu, select User Management


Select Add New User under the Administration User heading

Contact the Building and Energy help line for assistance in complex entity applications.

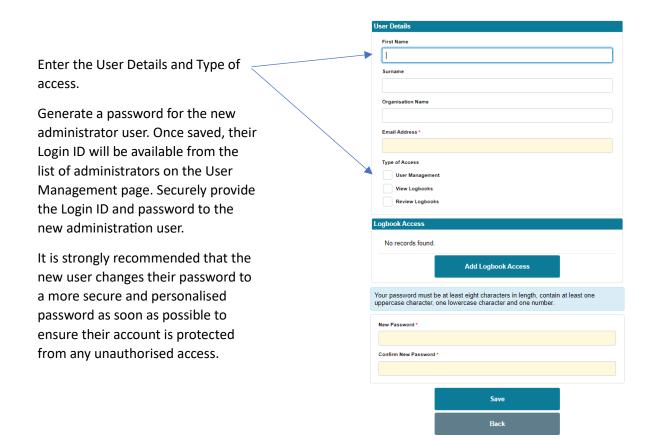

Create a logbook

Once logged in as an administrator, create a logbook by selecting Main Menu - My Electrical Logbooks, and using the Add button at the bottom of the page.

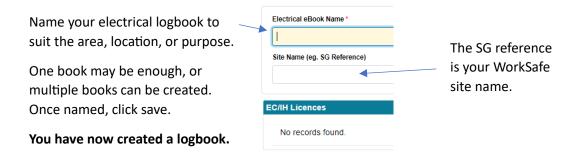


Add and edit IH/EC licence's

From the Main Menu, select My Electrical logbooks and use the edit button under the relevant electrical logbook to be edited.



The Logbook name can be changed, and a Site Name (SG Reference) can be entered or edited.

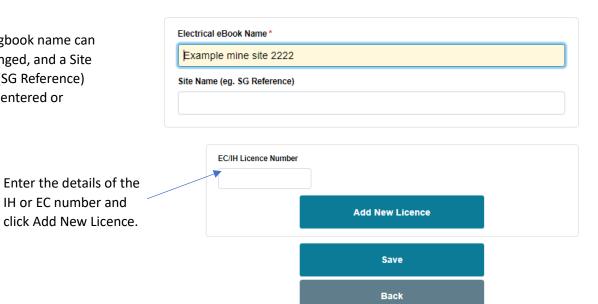

An IH or EC can be deleted by selecting the adjacent red cross. You will be prompted to confirm you want to delete the licence.

Add an electrical worker with authority

IH or EC number and

All Electrical Workers with authority use their own eNotice login id to make entries into the logbook. See Registration and setting up your account | Department of Energy, Mines, Industry Regulation and Safety (commerce.wa.gov.au)

An administrator login is required to add an electrical worker with authority. An electrical worker with authority can only access and enter information in logbooks dependent on the access granted.

To add a new electrical worker with authority, from the Main Menu select User Management. Under the heading Electrical Workers with authority, select Add New Authority.




The Electrical Worker with Authority will now be able to see an option in their eNotice login main menu, "New Electrical Logbook Entry", and be make entries as authorised.


New logbook entries

Login with your eNotice id. From the Main Menu select New Electrical logbook Entry.

Select the Electrical logbook name and the Book Entry Type. The options available will be dependent on the access provided by the Administration User during the setting up of the Electrical Worker with Authorities access.

Select the type of entry that you want to record.

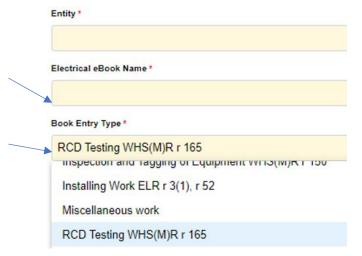

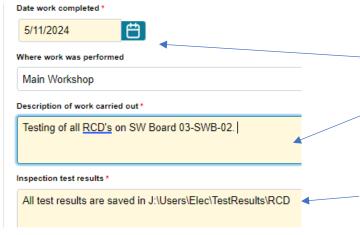


Provide the required information to record the details of the work carried out.

Provide a description of the work carried out.

In all entries, test results or a reference to the location of the records can be entered.

Relevant testing documentation, copies of notes etc. can be uploaded here. File types of JPG, JPEG, PNG, PDF, DOC, DOCX, XLS and XLSX are all compatible.

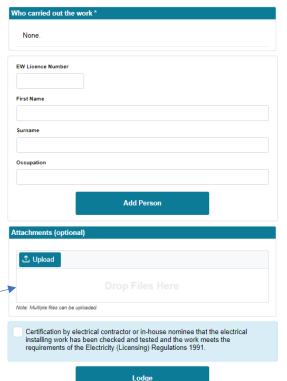

Enter the EW number or the details of the person authorised to carry out the work.

EW details or the details of the person/s who carried out the work can be entered without registering for eNotice.

Electrical installing work entry

From the main menu select new logbook entry.


Select the details relevant to the entity the work was carried out for.


Select the relevant Logbook for the electrical installing work.

From the Book Entry Type dropdown, select Electrical Installing Work.

Select the relevant EC or IH Licence the work was carried out under.

A personal book reference (i.e. a Work Order) may be referred to. This function is useful when downloading and searching entries.

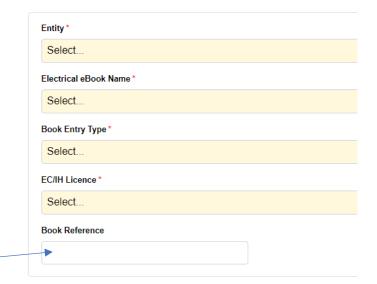

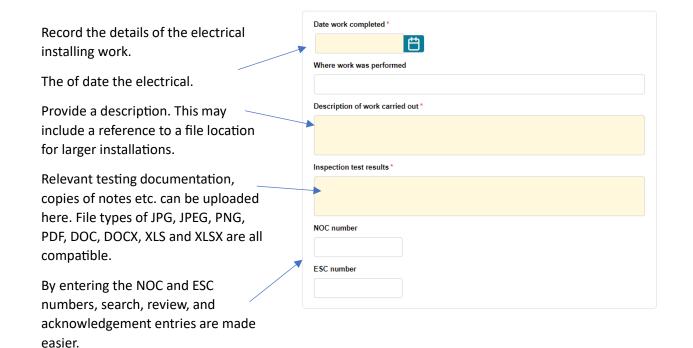


Individual and additional electrical workers can be added. They do not need to be registered in eNotice.

Relevant testing documentation, copies of notes etc. can be uploaded here. File types of JPG, JPEG, PNG, PDF, DOC, DOCX, XLS and XLSX are all compatible.

After the electrical installing work details have been added, select the relevant Nominee to notify of the installing work entry.

Select Notify Nominee and an email will be sent.

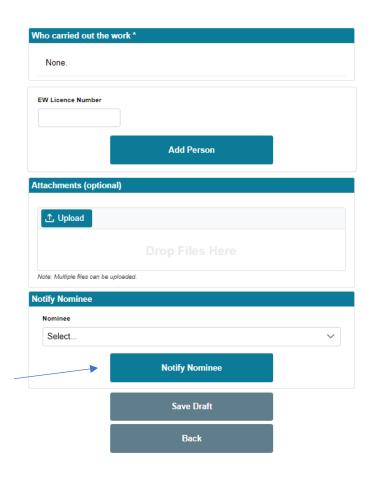

Electrical supervisor entries

Work Health and Safety (Mines) Regulation 2022, schedule 26 cl 5(3) requires the recording of instances that have been reported to the mine operator including:

- Investigating and reporting to the site senior executive or exploration manager details of electric shock, fire or dangerous occurrence involving electricity. WHS(M)R 2022 sch 26, cl 5(3)(g)(i), (ii) and (iii).
- Reporting to the site senior executive or exploration manager any situation which may affect the safe use of electricity or contravene the Act. WHS(M)R 2022 sch 26, cl 5(3)(f)
- Stopping use of equipment considered to be dangerous. WHS(M)R 2022, sch 26, cl 5(3)(e)

Only electrical supervisor entries satisfy the requirements of Work Health and Safety (Mines) Regulation 2022, r. 641C (a) and (b) (iv) and (v).

Only electrical supervisors should have access to document such entries.

Viewing entries and editing logbooks

From the main menu, select My Electrical Logbooks and use the edit icon.


The icons available under each logbook allow editing, downloading of eBook entries, Downloading of eBook users and the deletion of a logbook.



Logbooks can be edited to change their name, enter a site name and to add or delete EW/EC and IH licences.

Review and acknowledge Logbook entries

With authorisation provided to review and acknowledge entries, each entry can be individually viewed and commented on, or alternatively multiple entries can be acknowledged at the same time.

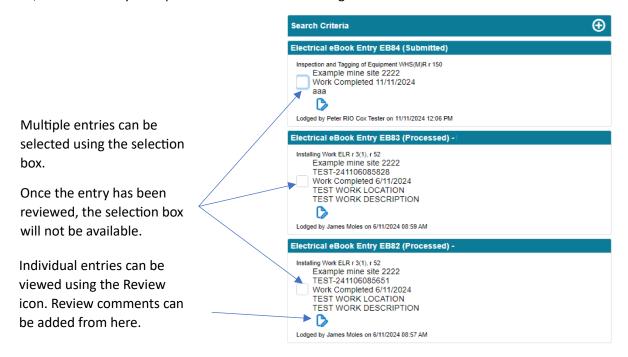


Comments and the acknowledgement will also be available to view in the spreadsheet once entered and saved.


Download logbook history

Authorised users can download a spreadsheet of logbook entries.

 From the main menu, select my electrical logbooks and use the export icon to download logbook entries.



Search criteria can be minimised further by entering details in the selectable fields.

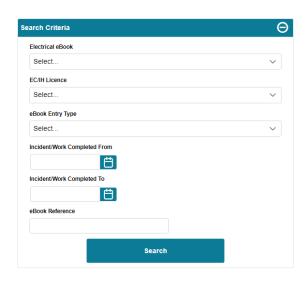

Available logbook user access	Types of eNo	tice Electrical Lo	gbook users.				
Available entry type.	Competent worker	Electrical Supervisor	Electrical Worker	In-house/ EC	Mine Operator	Network- Operator Electrical- Inspector	Resource Safety Inspector
Details of the most recent RCD tests carried out under regulation 165 of in use residual current devices WHS(M)R 2022 r. 641C. (b)(ii).	Х	X	х	х			
Draft electrical installing work entry.		Х	х	Х			
Inspection and testing of electrical equipment WHS(M)R 2022 r. 641C. (b)(i).	Х	х	Х	х			
Investigating and reporting to the site senior executive or exploration manager details of electric shock, fire or dangerous occurrence involving electricity. WHS(M)R 2022 sch 26, cl 5(3)(g)(i), (ii) and (iii).		Х					
Lodge Electrical installing work (as defined in <i>the</i> Electricity (Licensing) Regulations 1991 regulation 3(1)) carried out at the mine WHS(M)R 2022 r. 641C(b)(iii).				х			
Reporting to the site senior executive or exploration manager any situation which may affect the safe use of electricity or contravene the Act. WHS(M)R 2022 sch 26, cl 5(3)(f).		Х					
Stopping use of equipment considered to be dangerous. WHS(M)R 2022, sch 26, cl 5(3)(e).		Х					
View eNotice Electrical Logbook entries.	Х	X	х	Х	X	х	Х
Review, acknowledge and comment on eNotice Electrical Logbook entries.		Х		Х	Х		